
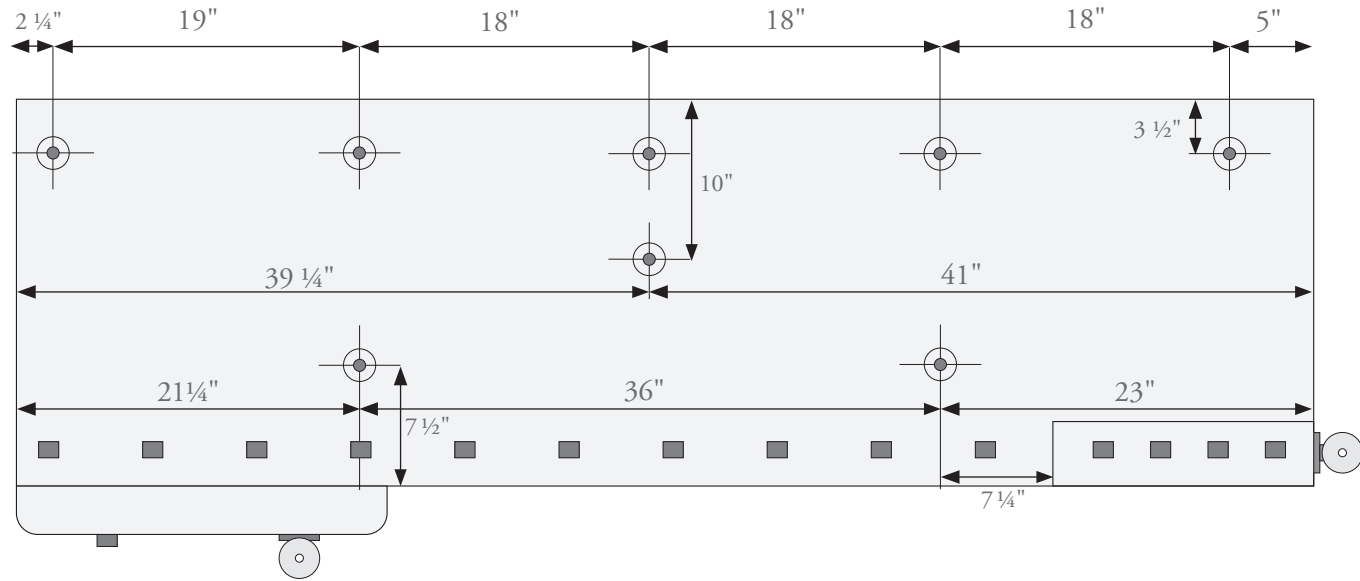


HOLDFAST HOLE LAYOUT DIAGRAM

*Note: Holdfast holes are positioned to ensure holes do not overlap seams in the benchtop lamination.
 Adjust the placement as needed to suit the materials and design used for your workbench.*

TOP VIEW

All Holdfast holes are 3/4" in diameter



FRONT VIEW

Additional Notes:

- The Holdfast holes along the back side of the bench are intended to hold battens for planing stops. They line up offset from the line of Bench Dog holes on the front side.
- The middle hole is intended for clamping a shooting board or bench hook.
- The front holes are spaced to secure our Dovetail Vise, and can be used to hold material when chopping dovetails or mortises.
- Add new holes as needed. We recommend 3/4" Wood Owl Auger Bits for drilling holes.
- The hole by the tail vise is positioned to allow chopping over leg.

